 


butterfly accelerator

#1580

 
BUTTERFLY ACCELERATOR

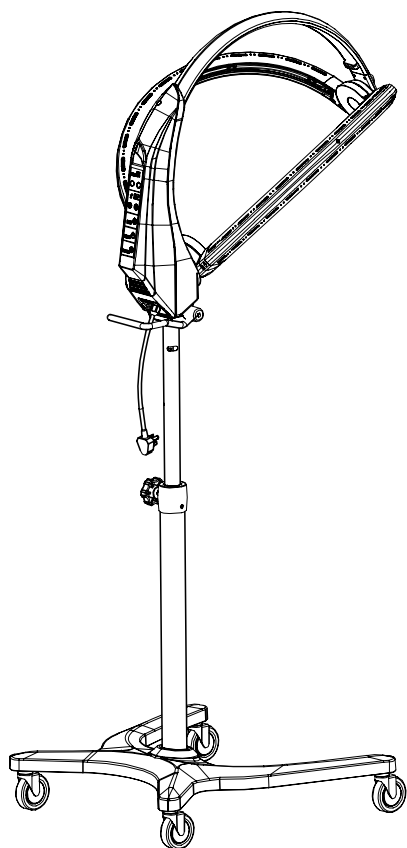



GET STARTED

SPECIFICATIONS

Width: 635mm (25")
Depth: 783mm (30.8")
Height: 1680mm (66.15")
NET Weight: 12kg (26.4lbs)

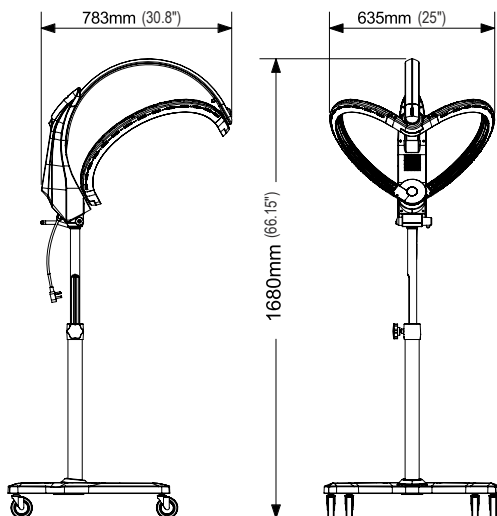

ASSEMBLY

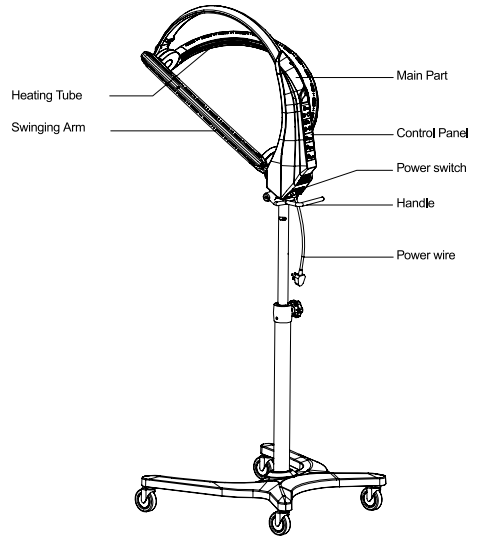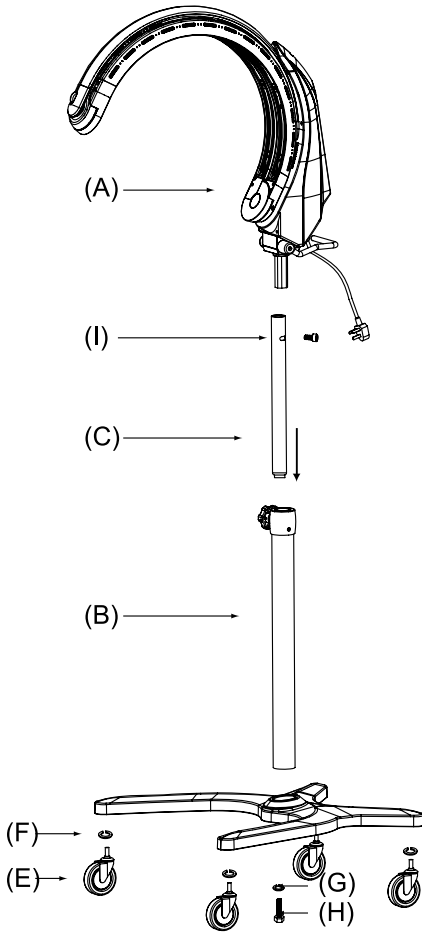  

ASSEMBLY

1. Fix the wheels in the tripod, screw it with wrench (K).
2. Fix the support column in the tripod (pay attention to the direction!), tighten the screws.
3. Fix the movable support column into the support column (pay attention to the direction! Aim the slot toward the screw, tighten the screw to fix it).

 
Pay Cautious Attention: For sake of safety, before completing assembling it, do not unscrew the screws for adjustment.

4. Put the main part in the hole sites of the support column, fixing with screws.



For fear of the activity tube bouncing out to cause injury, please do not loosen the screw before finishing assembling.

OPERATION: FUNCTIONS

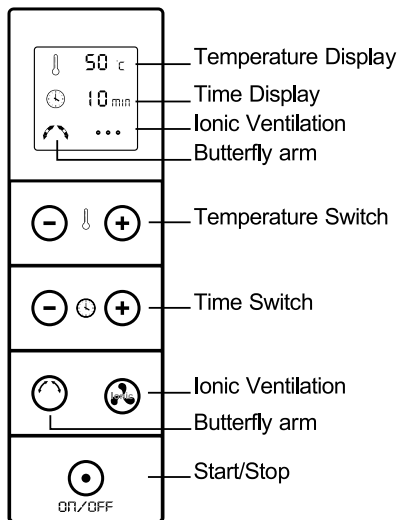

TEMPERATURE DISPLAY: The default temperature is 55°C. By pressing the + or -, the temperature will add or subtract 5°C. Hold down the + button for maximum temperature of 70°C. Hold down the - button for minimum temperature of 40°C.

 
 
 
TIME DISPLAY: The default time is 15 minutes. By pressing the + or -, the time will add or subtract 1 minute. Hold down the + button for maximum time of 60 minutes. Hold down the - button for minimum time of 1 minute.

IONIC VENTILATION: This is an optional function. By pressing the button, this will release negative ions until the end of the operating time. This does not work by default.

BUTTERFLY ARM: The movable arms can be fixed by pressing this button. This function can be chosen whilst in operation and once chosen, the button indicator lights up. After use, it returns to its initial state.

START/STOP: Once this button is pressed the machine will start working, by pressing again the machine will stop.

OPERATION: HOW TO USE

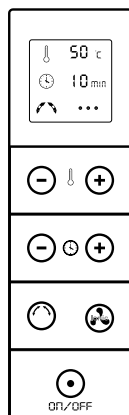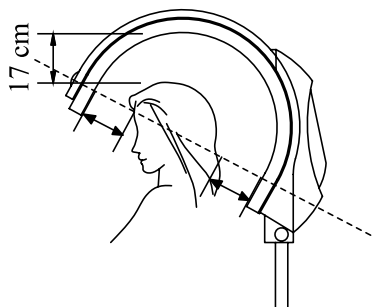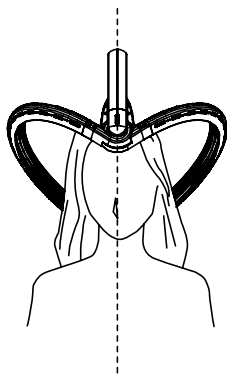

CAUTION

DO NOT USE HAND OR OTHER THINGS TO HINDER THE SWINGING ARM WHEN IT IS WORKING, OR THE SWINGING ARM WILL BE DAMAGED.

OPERATION

1. Move the machine to the middle of the head, adjust the height.

Attention: The distance between the heating part and the head should be 17cm (6.7").

2. Plug in the power line, turn the machine on, then the display screen becomes the default state, as the left-down picture shows.

3. Set the working time and temperature.

4. Work finishing, after 3 times of alarming sound, the machine comes back to the default state.

IMPORTANT PLEASE READ THESE SAFETY INSTRUCTIONS

GENERAL SAFETY

1. IMPORTANT: Read carefully and keep these instructions in a safe place.
2. Use this product only for its intended function and do not use attachments not recommended by the manufacturer.
3. Do not use outdoors.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

PRECAUTIONS

1. Unplug the power before moving the main part
2. In case of electric shock cause by improper use or short circuit, safe grounding must be ensured.
3. Hold the handle when using the function buttons.
4. Do not wash the surface of the machine with chemicals.
5. Do not dismantle or repair the machine, which will lead to operation failure or accidents. It should be done by professional technical staff.

ELECTRICAL APPLIANCES

1. DO NOT allow children to operate in this product.
2. Turn the power off and remove the plug when not in use or when cleaning.
3. Do not let the power cord get damaged in any way.
4. Keep the power cord away from heat sources.
5. Do not use an extension cord unless the cord complies with local electrical safety standards.
6. Periodically inspect the power cord for signs of damage.
7. Do not operate any electrical item with a damaged power cord. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Unplug the power when long- time disuse, unattended or maintenance.



WARNING: DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER.



**CAUTION: DO NOT USE IF FLEXIBLE CORD IS DAMAGED
ANY REPAIRS TO THIS UNIT MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN.
TO REPAIR FLEXIBLE CORD, USE TWO CORE SHEATHED CABLE ONLY.**

comfortel

help.comfortel.com.au

PRODUCT CODE

#1580-AU/NZ, UK, EU

VOLTAGE 230-240V POWER: 1100W, 50HZ

#1580-US

VOLTAGE 110V POWER: 1100W, 50HZ

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE

WARRANTY PERIOD

TERMS AND CONDITIONS. For more information about our warranty, please refer to our website:

WARRANTY



PURCHASE DATE

INVOICE NUMBER

NOTE YOUR PURCHASE DATE & INVOICE NUMBER FOR FUTURE REFERENCE