 


eden headspa

#2301.01 EDEN ELECTRIC RECLINING SHAMPOO UNIT

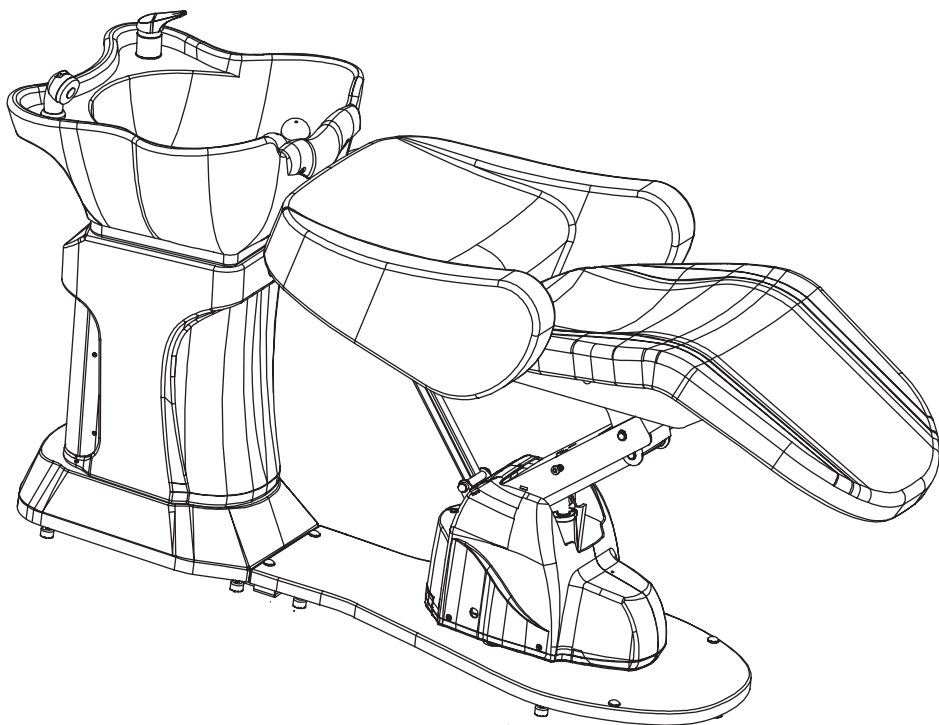



IMPORTANT PLEASE READ THESE SAFETY INSTRUCTIONS

Listed below are important safety precautions:

GENERAL SAFETY

- Read and retain these instructions in a secure location.
- Use the product only for its intended purpose and avoid using attachments not recommended by the manufacturer.
- Do not use the product outdoors.

PLUMBING

Ensure that a licensed plumber handles the plumbing installation of this unit.



IMPORTANT
DO NOT ALLOW CHILDREN AROUND THE UNIT WHEN IN USE



 
IMPORTANT
DO NOT ALLOW CHILDREN TO OPERATE THE ELECTRIC MOTORS THAT MOVE THE UNIT

 
ELECTRICAL APPLIANCE SAFETY GUIDELINES

- Professional Installation: Have a qualified electrician install all power outlets (GPO's) according to local electrical standards.
- Power Off and Unplug: Always turn off the power and remove the plug when the appliance is not in use.
- Cleaning Precautions: Prior to cleaning chair cushions, power off and unplug the appliance.
- Cord Protection: Avoid damaging the power cord by avoiding twisting, pulling, or pinching.
- Heat Sources: Keep the power cord away from heat sources to prevent potential damage.
- Extension Cord Safety: If needed, use an extension cord that complies with local electrical safety standards.
- Cord Inspection: Regularly inspect the power cord for signs of damage. Discontinue use if any damage is found and arrange for repairs or replacement.
- Damaged Cord Warning: Never operate an electrical item with a damaged power cord. Ensure the cord is in good condition before operating.

GET STARTED

All measurements are in mm

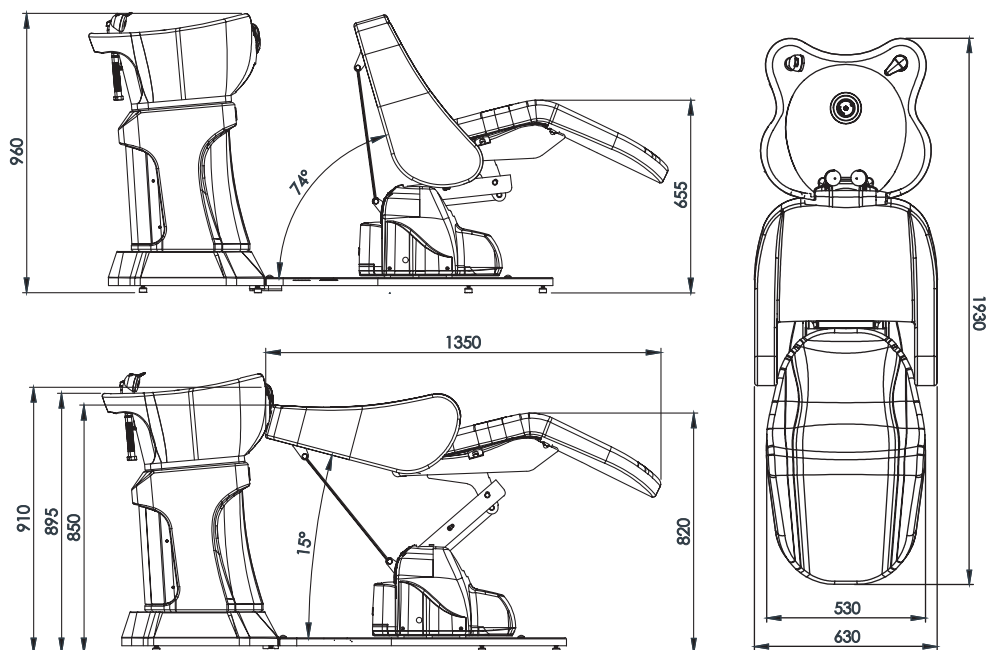

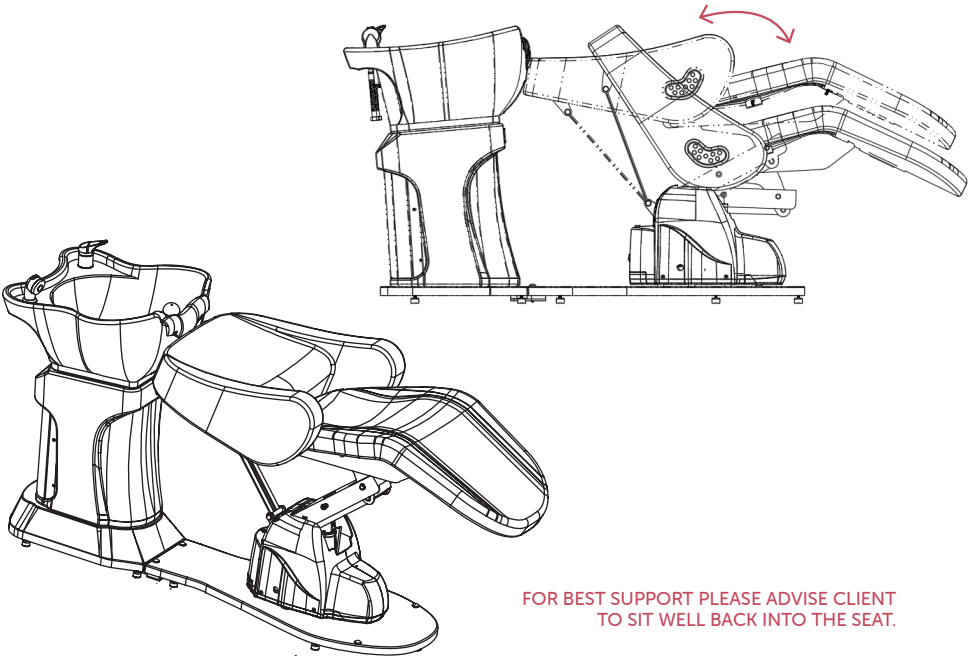

FOR BEST SUPPORT PLEASE ADVISE CLIENT
TO SIT WELL BACK INTO THE SEAT.

 
OPERATION: HAND HELD BLUETOOTH REMOTE CONTROL

FUNCTIONS

- 1 Manual Recline Down
- 2 Manual Recline Up

EFFORTLESS HEIGHT ADJUSTMENT /
AUTO RECLINE

Experience unparalleled comfort with the height adjustment feature. Let the chair effortlessly adjust to your desired position, providing luxurious relaxation at the touch of a button.

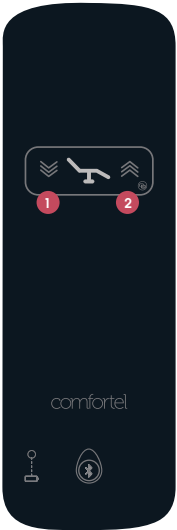

BATTERY INDICATION

When the battery power level falls below 20%, the LED will flash 4 times when a key is pressed.

When the battery has been changed, the LED will be lit for 4 seconds after the first keypress.


CHANGING THE BATTERY

A standard CR2032 coin cell battery is required.

Open the battery cover on the back using a coin or a similar tool to turn the arrow counterclockwise from the locked state to the unlocked state.

DIAGRAM A

 All measurements are in mm

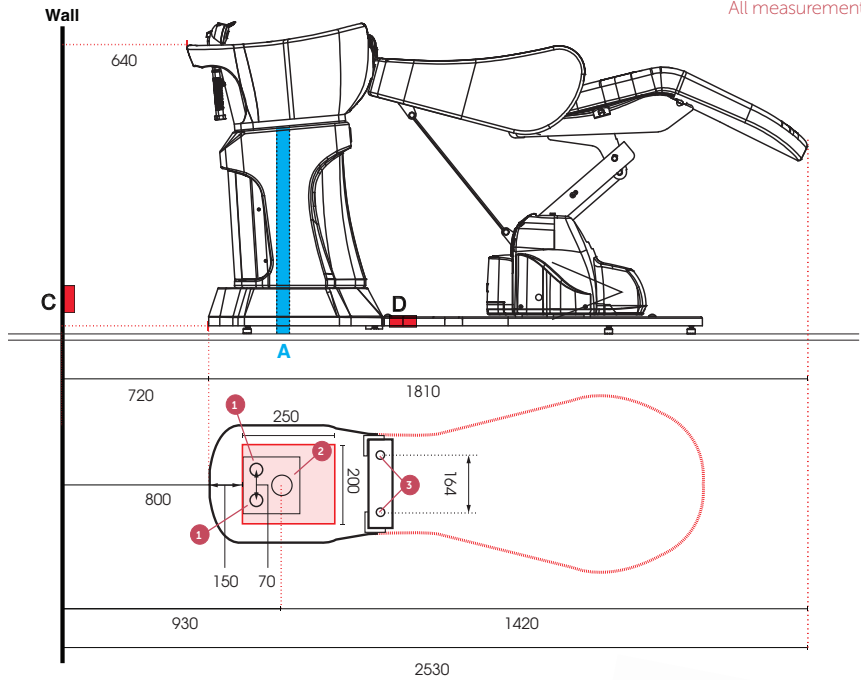

- 1 Cold and Hot Water Pipe Position
- 2 Drain Connection
- 3 Expansion Bolt Position

PLUMBING ACCESS OPTIONS

Determine the best way to connect plumbing

A PLUMBING

From under the basin stand connect plumbing to the floor.

ELECTRICAL ACCESS FOR RECLINE AND HEIGHT ADJUSTMENT

Determine the best way to connect Power.

OPTION C+D: POWER OUTLET (GPO)

 
Install Power Outlet (GPO) to the wall (option C) or under the chair (option D). Use a recessed, waterproof GPO for under the chair option.

BEFORE PLUMBING INSTALLATION SECURE AND BOLT DOWN BASIN STAND

Secure the basin stand base to the floor using appropriate fixings (not supplied).



THE BASIN STAND
MUST BE SECURED
TO THE FLOOR.

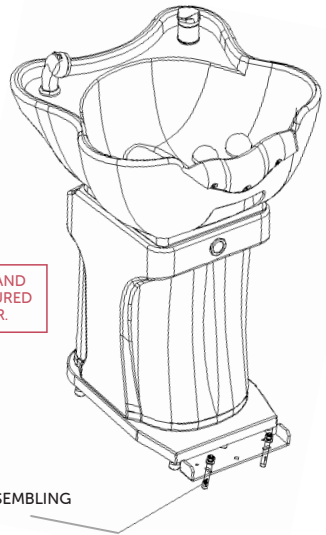

EXPANSION BOLT ASSEMBLING



 
CRITICAL PLUMBING NOTICE

It is mandatory that all plumbing work be carried out exclusively by a licensed plumber.



IMPORTANT ELECTRICAL SAFETY NOTICE

All power outlets (GPO's) must be installed by a licensed electrician in compliance with local electrical standards.

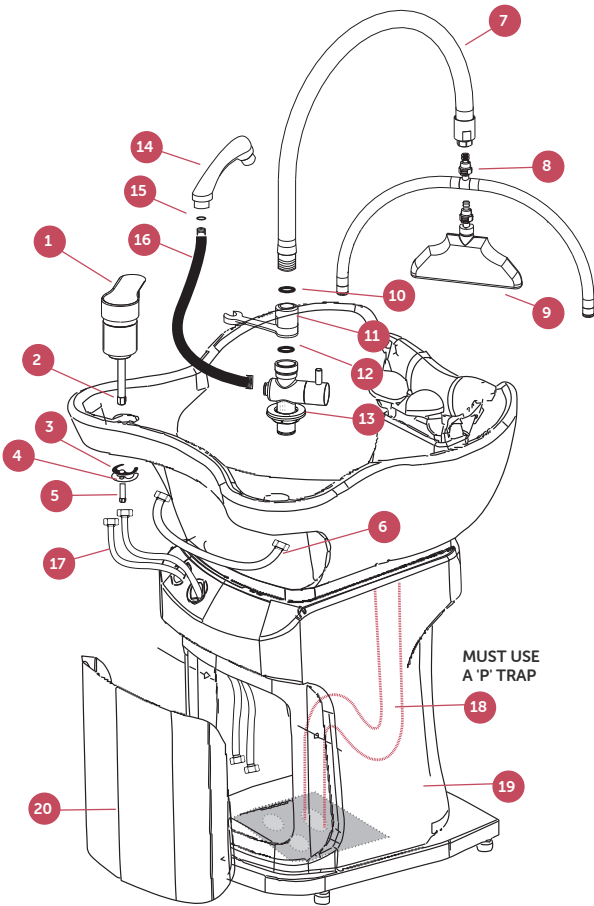

BEFORE INSTALLING CONSIDER THE FOLLOWING:

Read instructions first, wear gloves/eye protection, and turn off water at the isolation valves or mains before you start.

PLUMBING & INSTALLATION

Install Flick Mixer

- Insert Flick Mixer (1) with O-Ring (2) into the basin hole.
- From underneath, secure with washers (3)(4) and long nut (5).
- Connect Small Water Supply Hose (6) to the tap.

Assemble Diverter, Showerhead Cradle & Flexible Arm

- Fit Rubber Washer (12) to the top of the Diverter Valve (13)
- Fit Showerhead Cradle (11) into the diverter valve body
- Fit Rubber Washer (10) and screw the Quick Connect Flexible Arm (7) to the top outlet of the diverter

Install Diverter Assembly into Basin

- Insert the assembled Diverter Valve into the basin hole.
- Secure the cradle from underneath using the fixing nut. Connect the other end of the Small Water Supply Hose (6) to the base of the cradle

Install Showerhead

- Insert Rubber Washer and Connect Black Showerhead Hose (16) to Showerhead (14) and to the side port of Diverter Valve (13)
- Insert Showerhead into the cradle (11) on the basin

Connect Hot and Cold Water Supply

Attach the hot & cold (1/2" connection) braided hoses (17) from the Flick Mixer (1) to your hot and cold plumbing. Hot and cold water are supplied from the wall or from the floor, depending on the salon's plumbing layout.

Attach HeadSpa Heads

Fit the QuickConnect Flexible Arm with Head Spa Rainfall Head (8) or Head Spa Waterfall Head (9)


Stand-Basin Assembly Plumbing connection

Connect Basin to P trap (18) (not supplied) to the waste outlet. Follow standard plumbing practices to complete installation.

PARTS


- | | |
|-----------------------------|-----------------------------|
| 1 Flick Mixer | 11 Showerhead Cradle |
| 2 O-Ring | 12 Rubber Washer |
| 3 Rubber washer | 13 Diverter Valve |
| 4 Metal washer | 14 Showerhead |
| 5 Long nut | 15 Rubber washer |
| 6 Small Water Supply Hose | 16 Black Showerhead Hose |
| 7 QuickConnect Flexible Arm | 17 Hot & Cold Braided Hoses |
| 8 Head Spa Rainfall Head | 18 P trap (not supplied) |
| 9 Head Spa Rainfall Head | 19 Stand |
| 10 Rubber Washer | 20 Rear Access Panel |

 SEAT CUSHION

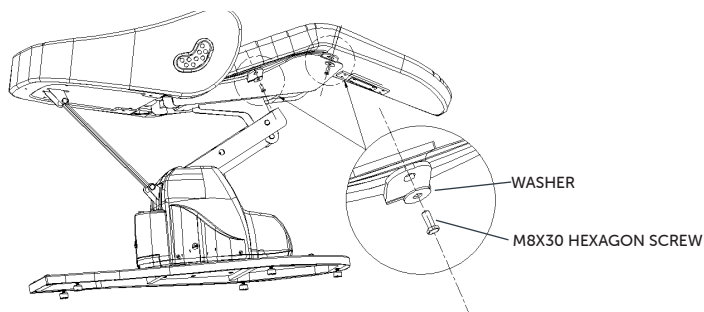


CONNECT SEAT TO THE BASIN

 Using the provided bolts, secure the Chair to the Basin Stand.

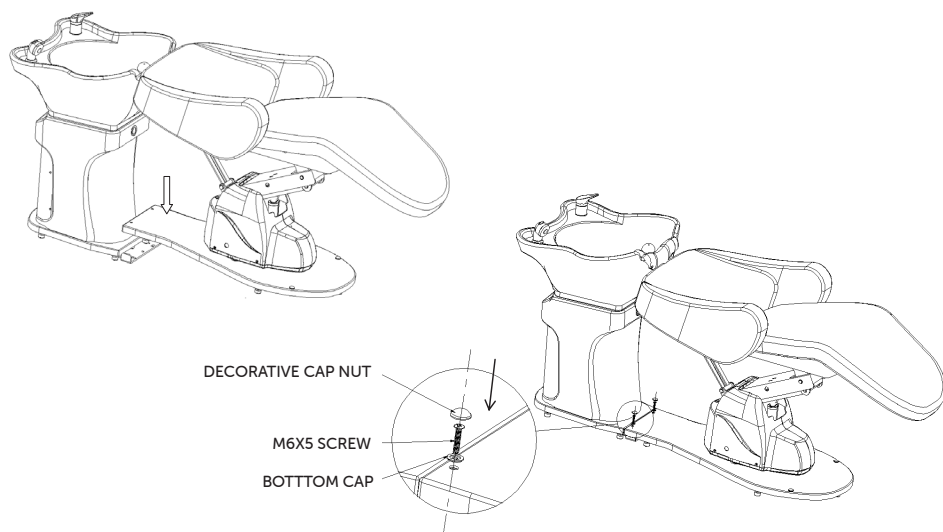

INSTALL SILICONE PILLOW ONTO BASIN

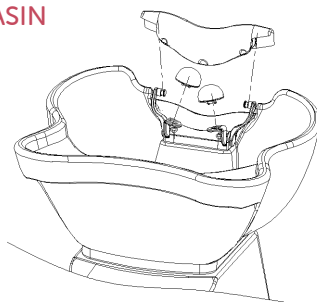 

UPHOLSTERY

All upholstery needs some care; good housekeeping will help to prolong the life of any upholstered products. Avoid extreme temperatures. Extreme cold can make your vinyl prone to cracking, while extreme heat can cause permanent stretching. Avoid exposing your products to direct sunlight for prolonged periods of time.

ALWAYS FOLLOW THE CLEANING INSTRUCTIONS

- Wipe with a clean colourfast cloth dampened with mild alkaline free soap and luke warm water. Do not wet excessively.
- Remove all traces of any cleaning product by wiping with fresh water and a clean cloth.
- Dry with a soft, clean cloth.
- Stubborn grime may require gentle scrubbing with a soft brush.

Staining with Hair Colour or Bleach

- **Removing difficult stains such as professional hair colour or bleach is recommended that it is cleaned immediately.**
- Hair colour & bleach reacts to all surfaces the same as it does to hair. If hair colour is able to develop & penetrate the surface of the material, it may be impossible to remove.
- Treat all stains promptly as per our cleaning instructions

Please see our Material Testing Reports

<https://help.comfortel.com.au/material-testing-reports/>

Do not use:

- hot or boiling water
- hydrocarbons including alcohol
- acetone
- furniture polishes
- bleach
- concentrated detergents
- abrasive powder or paste cleaners
- steel wool
- silicon or petroleum-based cleaners
- solvent based or abrasive cleaning agents

MAINTENANCE

A periodic inspection of all components and fasteners should be made to ensure that your Comfortel Product is structurally intact and functioning properly.

Damaged and broken parts should be replaced and loose fasteners tightened.

All maintenance to be carried out by a suitably qualified trades person.



help.comfortel.com.au

PRODUCT CODE

- #2301.01.B EDEN WASH LOUNGE CHAIR - BLACK
- #2301.01.SA EDEN WASH LOUNGE CHAIR - SAND
- #2302.01.W EDEN BASIN & STAND

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE

WARRANTY PERIOD

TERMS AND CONDITIONS. For more information about our warranty, please refer to our website:

WARRANTY

PURCHASE DATE

INVOICE NUMBER

NOTE YOUR PURCHASE DATE & INVOICE NUMBER FOR FUTURE REFERENCE