# comfortel

# digital facial steamer

#5206.01 DIGITAL FACIAL STEAMER




THIS PRODUCT IS INTENDED FOR COMMERCIAL/PROFESSIONAL USE ONLY

comfortel

help.comfortel.com.au

## **IMPORTANT PLEASE READ THESE SAFETY INSTRUCTIONS**

- 1. Read carefully and keep these instructions in a safe place.
- 2. Use this product only for its intended function and do not use attachments not recommended by the manufacturer.
- 3. Do not use outdoors.
- 4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- 5. Children should be supervised to ensure that they do not play with the appliance.
- 6. Periodically inspect the power cord for signs of damage. Keep the power cord away from heat sources.
- 7. Do not use an extension cord unless the cord complies with local electrical safety standards.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the salon. Ask your installer for advice.
- 9. Turn the power off and remove the plug when not in use or when cleaning.
- 10. When the appliance is used in the bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 11. The appliance should be cleaned regularly to avoid the accumulation of grease and other residues.

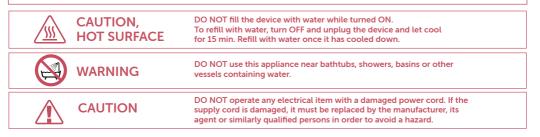

# GET STARTED

The Digital Facial Steamer uses an electric heating element to boil the water in the reservoir jar in order to produce steam. The steam vapor is passed through to the nozzle where it can be directed onto the client's skin. The steamer has an Ozone function which passes the steam through an ultraviolet light\*. This has an antibacterial action on the skin, which may be beneficial for acne and blemished skins. The stable round base on wheels allows it to be portable and move around the salon. The adjustable arm, allows to set the head of the steamer in the direction you choose.

Steaming prepares the skin for further treatment, and has the following benefits:

- Softens dead skin cells for better cleansing.
- Opens pores for deep cleaning.

Use only for the activation of steam.

- · Loosens oil, dirt, and cosmetic residue.
- Temporarily softens wrinkles.
- Improves blood circulation and skin hydration.
- Provides aromatherapy benefits to stimulate and relax
  the skin.

Helps detoxify the skin.
 the skin.
 the skin.
 the skin.

# CONTRAINDICATIONS

 
The steamer should not be used where the following conditions are present:

- Recently waxed skin, or skin that has received any kind of heat treatment in the last 48 hours.
- Sunburned skin.
- Rosacea
- Highly vascular skins (skins with a lot of redness or broken capillaries).
- Asthmatic clients may experience breathing difficulties while under the steam/vapor. It may be necessary to elevate their head slightly and position the steam further away.
- Ozone has some reported potential for being a respiratory irritant. Use of the Ozone function should be
  minimized or eliminated altogether for clients who have a history of asthma or any respiratory problems.
- Ozone is highly flammable and must not be used around any flame or combustible substances.


comfortel

# GET STARTED : INSIDE THE BOX

DESCRIPTION       QUANTITY       DIMENSIONS         FACIAL STEAMER MAIN UNIT AND ADJUSTABLE SPRAY ARM       X1       Height: 110 cm Depth: 28 cm Weight: 5.2kgs         COLUMN       X1       1         COLUMN       X1       1         FIVE STAR STANDING LEG       X5         Five STAR BASE       X1         Five STAR FLAT BOARD       X1         Five STAR FLAT BOARD       X1         Five STAR FLAT BOARD       X1         Sesential Oil SUDPORT       2         Five STAR FLAT BOARD       X1         Sesential Oil SUDPORT       2         Mio SCREWS       X1			-	
FACIAL STEAMER MAIN UNIT AND ADJUSTABLE SPRAY ARM       X1         COLUMN       X1         COLUMN       X1         Image: Column       X5         Image: Column       X1         Image: Column       X1         Image: Column       X1         Image: Column       Image: Column         Image: Column       X1         Image: Column       Image: Column         Image: Column       Image: Column         Image: Column       Image: Column         Image: Column <t< th=""><td colspan="2">DESCRIPTION</td><th>QUANTITY</th><td>DIMENSIONS</td></t<>	DESCRIPTION		QUANTITY	DIMENSIONS
COLUMN       X1       SPRAY ARM 2. FACIAL STEAMER MAIN UNIT 3. BASE WITH WHEELS         FIVE STAR STANDING LEG       X5         FIVE STAR BASE       X1       1. ADJUSTABLE SPRAY ARM 2. ESSENTIAL OIL PAD 3. ESSENTIAL OIL PAD 3. ESSENTIAL OIL SUPPORT 4. ESSENTIAL OIL		UNIT AND ADJUSTABLE	X1	Width: 39 cm Depth: 28 cm Weight: 5.2kgs 2 1. ADJUSTABLE SPRAY ARM 2. FACIAL STEAMER MAIN UNIT 3. BASE WITH WHEELS 1. ADJUSTABLE SPRAY ARM 2. ESSENTIAL OIL PAD 3. ESSENTIAL OIL SUPPORT 4. ESSENTIAL OIL
FIVE STAR STANDING LEG     X5       FIVE STAR BASE     X1       FIVE STAR BASE     X1       FIVE STAR FLAT BOARD     X1       FIVE STAR FLAT BOARD     X1       FIVE STAR FLAT BOARD     X1       SUPPORT     3       MID SCREWS     X1		COLUMN	X1	
X1     SPRAY ARM       2. ESSENTIAL OIL PAD       3. ESSENTIAL OIL       3. ESSENTIAL OIL       2. UPPORT       3. ESSENTIAL OIL       3. ESSENTIAL OIL       3. ESSENTIAL OIL       4. ESSENTIAL OIL			X5	
FIVE STAR FLAT BOARD X1 3. ESSENTIAL OIL 3. ESSENTIAL 0. ESSENTIAL OIL 3. ESSENTIAL 0.		FIVE STAR BASE	X1	
O CO MIO SCREWS X1 4. ESSENTIAL OIL	0	FIVE STAR FLAT BOARD	X1	
	0.00	M10 SCREWS	X1	
WRENCH X1 5. STEAM OUTLET	0 00	WRENCH	X1	
ESSENTIAL OIL PAD X2		ESSENTIAL OIL PAD	X2	
FIXING SLEEVE X1		FIXING SLEEVE	X1	





- 1. WATER FILL POINT COVER
- 2. CONTROL PANEL
- 3. STEAM CHAMBER
- 4. WATER JAR
- 5. ELEMENT
- 6. FUSE BASE
- 7. POWER CORD

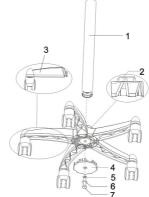

- 1. FIVE STAR FEET
- 2. COLUMN
- 3. FIVE STAR FEET BASE
- 4. FIVE STAR FEET FLAT BOARD
- 5. Ø10 GASKET
- 6. Ø10 SPRING
- 7. M10 BOLT
- 8. FIXING SLEEVE

# GET STARTED : ASSEMBLY

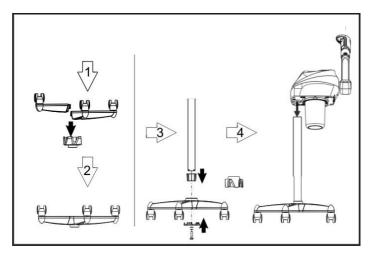


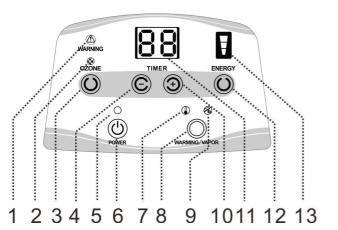

## OPERATION

#### 1. ADJUSTING THE SPRAY ARM

 Unlock the adjustable spray arm by pulling the lock and rotating the arm to a horizontal position.

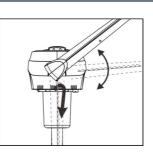

- 1. Attach the five-leg base to the column.
- 2. Secure the fixing sleeve and the support board using M10 screws.
- 3. Place the main unit onto the column.
- 4. Ensure all parts are tightly secured before use.

- Low Water Warning Indicator
- 2. Ozone Working Indicator
- 3. Ozone Power Switch
- 4. Decrease time


1.

- 5. Power Indicator
- 6. Power Button
- 7. Warming/Working Indicator
- 8. Warming or Steam Button
- 9. Steam Working Indicator
- 10. Increase Time
- 11. Time Display Window
- 12. Energy Selection
- 13. Energy Display Window

comfortel

# OPERATION

- Adjust the arm left-right (130 degrees) or forwardbackward (60 degrees) to suit your needs.
- The spray head rotates 360 degrees for better coverage.

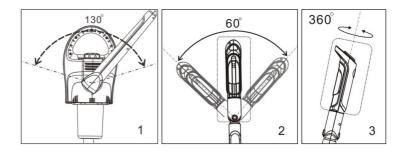


#### 2. FILLING THE WATER JAR

- Open the water fill point cap/lid and pour water into the jar
- Ensure the water level is between the maximum and minimum marks.



#### 3. ADDING ESSENTIAL OIL

- Open the sliding cover on the spray nozzle.
- Add 1-2 drops of essential oil onto the cotton pad.
- Replace the cotton pad when changing oils.

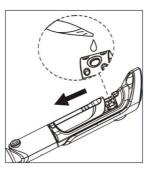

#### 5. CONTROL PANEL OPERATIONS

- Power On: Plug in and press the power button.
- Steam Activation: Press the "Warming/Vapor" button; steam starts in about 6 minutes.
- Time Setting: Adjust time (1-30 min for steam, 1-90 min for warming).
- Mist Intensity: Choose low, medium, or high mist.
- Ozone Function: Activate ozone for additional benefits.
- Water Level Monitoring: The system will alert if water is too low or too high.

#### SAFETY PRECAUTIONS

- Ensure the water jar is properly secured before turning on the machine.
- Do not add essential oil while the steamer is running.
- Keep the spray nozzle 40 cm away from the client's face.
- Avoid overfilling the water jar


comfortel

Do not adjust the spray arm forcefully.

- Always allow the water jar to cool before removing it.
- Use demineralised or distilled water to prevent mineral buildup on the element, which can lead to impurities and cause spitting.
- If any leakage occurs, turn off the power and check assembly.

#### 4. INSTALLING AND REMOVING THE WATER JAR

- Turn off the power before handling the water jar.
- To remove, hold the machine with one hand and rotate the jar clockwise.
- To install, align and rotate counterclockwise.

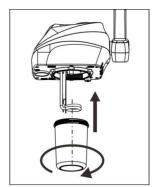

#### Ensure that the facial steamer is cleaned to avoid the accumulation of grease and other residues.

- 1. Turn OFF and unplug the device before cleaning.
- The external surfaces of the steamer may be cleaned with a soft cloth and soapy water or a mild non-abrasive surface cleaning agent.
- 3. The water jar should be emptied and refilled with distilled water after each use.
- 4. The water jar should be emptied and thoroughly cleaned with a white vinegar and water solution (1 part vinegar to 4 parts water) once a week. It is essential that the vinegar solution must be completely rinsed out of the jar before the steamer is used. If any residue remains the steamer may spit water when it is next used, posing an injury risk to the client.
- 5. If water has discoloured or left a residue inside the jar, the jar should be filled with the white vinegar and water solution and left to soak before washing out.
- 6. If the heating element needs cleaning, the jar filled with vinegar and water may be fitted to its usual position and left to soak overnight. This will remove any build-up of mineral scale from the element. Please ensure that all vinegar residue is completely removed from the element and the jar before using the steamer, as stated above.
- 7. When re-fitting the jar, ensure the jar is fitted firmly to the cradle. Failure to do so may cause the water to overflow when boiling, or interfere with the steam direction.



CAUTION, HOT SURFACE

DO NOT fill the device with water while turned ON. To refill with water, turn OFF and unplug the device and let cool for 15 min. Refill with water once it has cooled down.



#### PRODUCT CODE

#5206.01 DIGITAL FACIAL STEAMER VOLTAGE: 220-240V~ 50/60HZ POWER: 800W

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

# help.comfortel.com.au

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

#### PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE



#### PURCHASE DATE

WARRANTY PERIOD

#### INVOICE NUMBER

NOTE YOUR PURCHASE DATE & INVOICE NUMBER FOR FUTURE REFERENCE