

 
 
# atomic hair dryer

#5611.01.AU ATOMIC DRYER HEAD

#5611.02.AU ATOMIC DRYER PEDESTAL

#5612.01.AU ATOMIC DRYER WALL MOUNT - HEAD

#5612.02.AU ATOMIC DRYER - WALL ARM ONLY

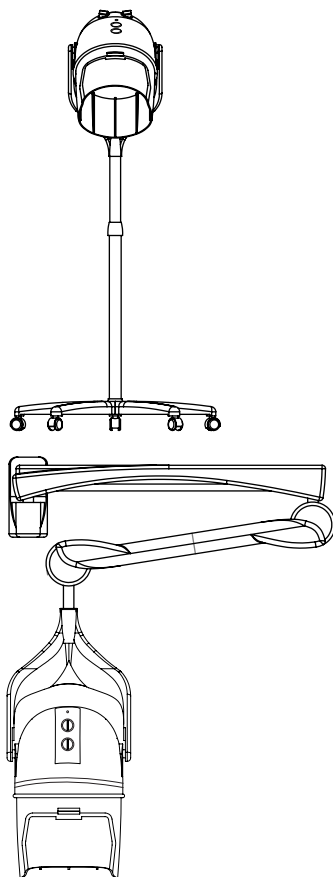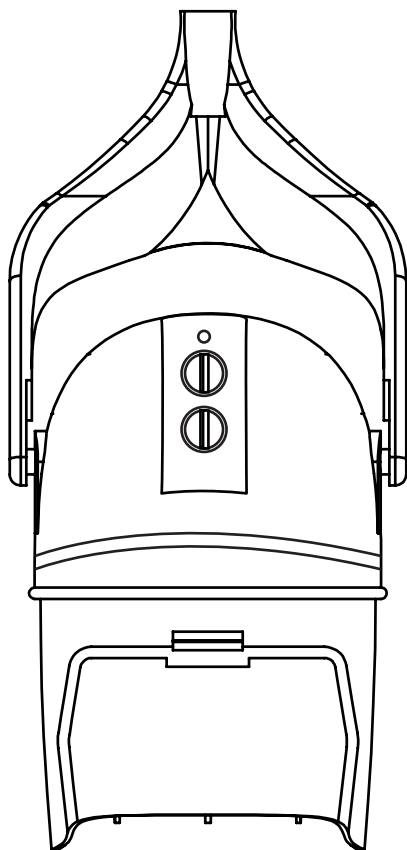




## IMPORTANT PLEASE READ THESE SAFETY INSTRUCTIONS

### GENERAL SAFETY

 1. Read carefully and keep these instructions in a safe place.
2. Use this product only for its intended function and do not use attachments not recommended by the manufacturer.
3. Always ensure the appliance is turned off at the power point before inserting or removing the plug.
4. Do not use outdoors.

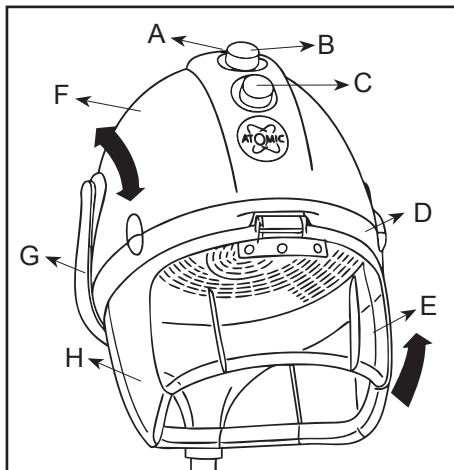

### PARTS LIST

- A. TEMPERATURE INDICATOR LIGHT
- B. KNOB FOR SETTING TIME
- C. KNOB FOR SETTING TEMPERATURE
- D. BRIM
- E. VISOR
- F. CAP
- G. FORK
- H. BELL

### PRECAUTIONS

1. Always follow the instructions specific to your model hair dryer and read the data label affixed to the rear of the hood
2. Before connecting hair dryer to mains power, check the voltage and power usage indicated on the data label are suitable for corresponding mains power supply.
3. Before mounting the hood onto the stand or wall arm, ensure that the hair dryer is not connected to mains power supply.
4. Never enclose or cover the top of the hair dryer hood as air must be able to move through the hair dryer for it to function properly.
5. Ceriotti and Comfortel decline all responsibility for any injury to persons or damage to property caused by installation or assembly that has not been carried out in compliance with our recommend precautions, or using supports and/ or accessories other than those manufactured by Ceriotti, or for any injury to persons or damage to property caused by installation or assembly that has been carried out by a non-specialized or non-authorized person.
6. In the case of the wall-mounted arm, Ceriotti and Comfortel moreover decline all responsibility for injury to persons or damage to property resulting from unsuitability of any support made of masonry or any other material.
7. Before cleaning, ensure that appliance is disconnected from power supply and that it has cooled down completely. It can then be cleaned using a damp cloth moistened with water or ordinary commercially available detergents, provided they do not contain alcohol or acetone.
8. For replacement of internal parts, or in the event of damage to the flexible power supply cord, all work must be completed by an authorized and qualified person only.
9. Never use this appliance near water such as bath tubs, showers, sinks or any other contained water. Never wall mount hair dryer over bath tubs, sinks or any other container used to hold water.
10. It is advised that the premises which provides mains power supply to hair dryer is fitted with an RCD or safety switch device with at least a 30mA trip sensitivity. Consult a qualified electrician for further advice.
11. For replacement of internal parts or in case of damage to cord or appliance, contact the manufacturer or distributor.
12. This appliance is not suitable for use by children
13. This appliance is not to be used by children or persons which reduced physical, sensory or mental capabilities; or by those who lack the experience and knowledge to use the appliance unless being supervised or instructed.
14. Do not allow children to play with appliance.
15. Do not conduct cleaning or maintenance of this appliance in the presence of children.



 
**Water poses a serious risk even when device is switched off, do not leave device connected to power supply after use.**



**CAUTION:  
DO NOT USE IF FLEXIBLE CORD IS DAMAGED**

**ANY REPAIRS TO HAIR DRYER MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN ONLY.**


## ASSEMBLY: BASE WITH STAND

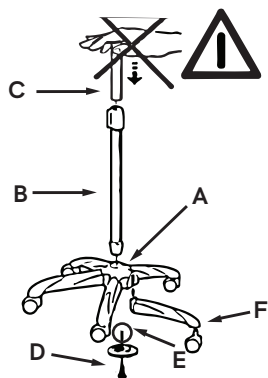

1. Insert the 5 base legs (F) into the base hub (A)
2. Secure the supporting pole (B) into the base hub (A). Insert weight (E) and then secure by tightening the screw and washer (D) from the bottom.
3. Loosen the plastic sleeve at the top of the supporting pole (B). Insert the smaller pedestal pole (C) so that it rests in the sleeve without compressing the spring within the pole (B). Fasten the small pedestal pole (C) in place by turning the plastic sleeve clockwise.
4. Insert the articulated joint of the hair dryer hood onto the top of the pedestal pole (C) and adjust the height as required by loosening and tightening the plastic sleeve as described in step 3.


## OPERATING INSTRUCTIONS

 1. Plug the power cord in at the wall point and turn on.
2. **SETTING THE TIME:** Set the work time from 0 to 60 minutes by turning the knob (C) of the timer clockwise. When the time set has elapsed, the knob goes back to the "0" position automatically. During operation of the hairdryer hood, it is always possible to turn the knob to the "0" position, thus using the knob as a main switch.
3. **SETTING THE TEMPERATURE:** Set the desired operating temperature, by turning the knob (E) of the thermostat clockwise. The orange warning light (B) lit up indicates that the heating phase is in progress. The light turns off when temperature has been reached.
4. Turn off the appliance and unplug it when you're done.

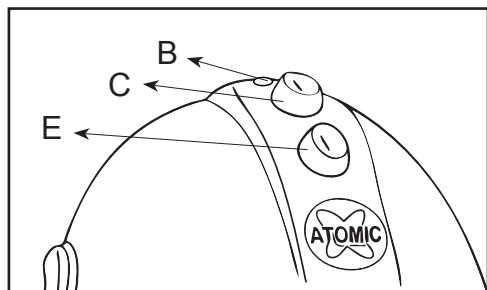


## ASSEMBLY: WALLMOUNT

 1. Set the bracket (A) in wall, recommended height is 2000mm off the floor as pictured
2. Fasten plate (G) to bracket (A) using two nuts.

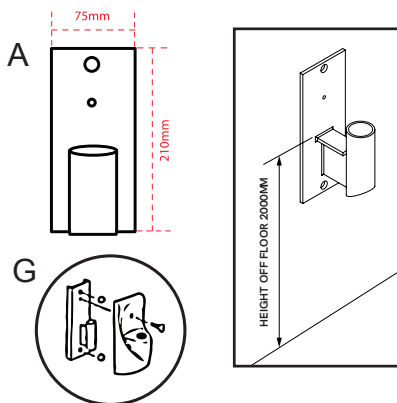

3. **IMPORTANT** - Without removing the safety clamp (B), that holds the articulated part of the arm inside which the return spring is housed, insert the arm (C) into plate (G) first feeding the electrical wire through plate (A+H).
4. Once the wire is fed through plate (A+H) a **licensed electrician** is required to fit a 3pin plug (not supplied) to the end of the wire.
5. After loosening the two screws (D) at the end of the arm (C), insert the pin (E) of the fork and tighten the two screws (D)
6. Once this has been done, the safety clamp (B) can now be removed ensuring to hold the arm with one hand so it does not spring open.
7. Connect the plug of the appliance into the socket on the arm.
8. If after use the hood tends to drop back down when it is moved up, turn the screw (F)

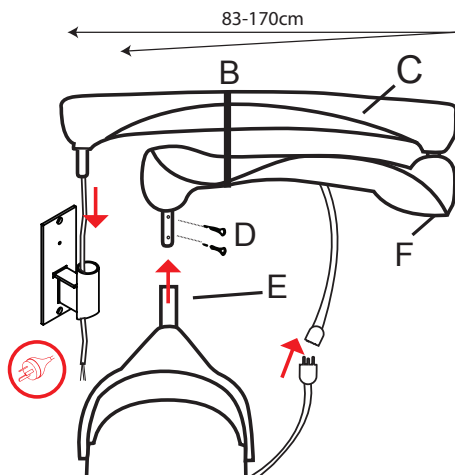 

# ADJUSTMENT OF ARTICULATED JOINT AND VISOR

## ADJUSTING THE ARTICULATED JOINT

After prolonged use the articulated joint of the hood may work itself loose resulting in the hood no longer remaining in the set position. To tighten the joint, remove the plug on the side of the articulated joint and tighten the screw located inside using an appropriate Hex key (by 1/4 of a turn at a time) until the articulated joint holds the hood in the set position.

## ADJUSTING THE VISOR

After prolonged use the hinge of the visor may work itself loose resulting in the visor no longer remaining in the set position. To tighten the hinge of the visor, use a Phillips head screwdriver and tighten screws on visor until the it holds itself in the set position.

# CLEANING & CARE

For cleaning the hood, visor and bell of the professional hair dryer:

- Wipe using a soft, damp cloth moistened with warm soapy water
- Dry with clean soft cloth (never use abrasive cleaners)

### Do not use:

- acetone
- furniture polishes
- bleach
- detergent
- abrasive cleaners
- steel wool

## MAINTENANCE

A periodic inspection of all components and fasteners should be made to ensure that your Comfortel product is structurally intact and functioning properly.

Damaged and broken parts should be replaced and loose fasteners tightened.

All maintenance to be carried out by a suitably qualified tradesperson.

comfortel

help.comfortel.com.au

### PRODUCT CODE

#5611.01.AU ATOMIC DRYER HEAD  
#5611.02.AU ATOMIC DRYER PEDESTAL  
#5612.01.AU ATOMIC DRYER WALL MOUNT - HEAD  
#5612.02.AU ATOMIC DRYER - WALL ARM ONLY  
POWER - 1400 W ; VOLTAGE - 220-240 V  
FREQUENCY - 50/60 HZ

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

### PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE

#### WARRANTY PERIOD

TERMS AND CONDITIONS. For more information about our warranty, please refer to our website:

WARRANTY



#### PURCHASE DATE

#### INVOICE NUMBER

NOTE YOUR PURCHASE DATE & INVOICE NUMBER FOR FUTURE REFERENCE