 


salon vac II with foot control

#9806 SALON VAC II WITH FOOT CONTROL

#9827 SALON VAC BAGS PK40

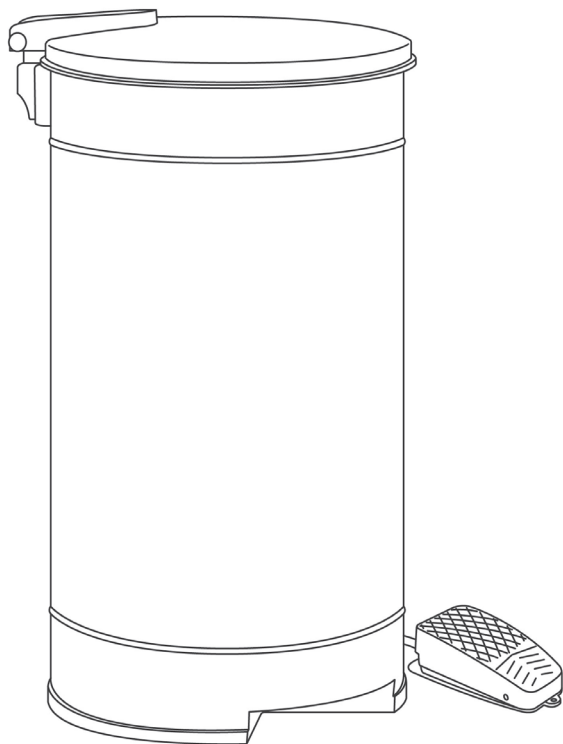

IMPORTANT PLEASE READ THESE SAFETY INSTRUCTIONS

GENERAL SAFETY

1. Read carefully and keep these instructions in a safe place.
2. Use this product only for its intended function and do not use attachments not recommended by the manufacturer.
3. Do not use outdoors.

 
ELECTRICAL APPLIANCES

1. Do NOT allow children to have access or operate this product.
2. Turn the power off and remove the plug when not in use or when cleaning.
3. Keep the power cord away from heat or wet sources.
4. Do not use an extension cord unless the cord complies with local electrical safety standards.
5. Periodically inspect the power cord for signs of damage.
6. Do not let the power cord get damaged in any way. Do not operate any electrical item with a damaged power cord.

PRECAUTIONS

1. Keep the power cord and the unit away from hot, wet or sharp surfaces, or areas where flammable liquids or gasses are in use. Do not use the unit on a wet floor.
2. Keep the air vent at the rear of the unit clear to ensure good airflow and prevent the unit from overheating.
3. Do not block the vacuum vent with any objects.
4. Keep face, fingers, jewellery and clothing away from the suction vent
5. Never attempt to vacuum up liquids, hot or combustible items (hot ash, cigarette butts etc.). Do not allow any other items (general waste, paper, tissues etc.) to be vacuumed into the unit.
6. Do not try to move the unit by pulling on the power cord or the open lid
7. If the unit does not turn on, check the fuse, located in the small pull-out drawer next to the ON/OFF switch. A spare fuse is held inside the drawer. Do not attempt to fix any other part of the unit yourself. Contact Comfortel, or a licensed electrician.
8. Please ensure the bags are checked and replaced regularly to maintain best performance of the unit. Check the bag every second day until you can establish a pattern of filling and changing bags under normal working conditions.

GET STARTED

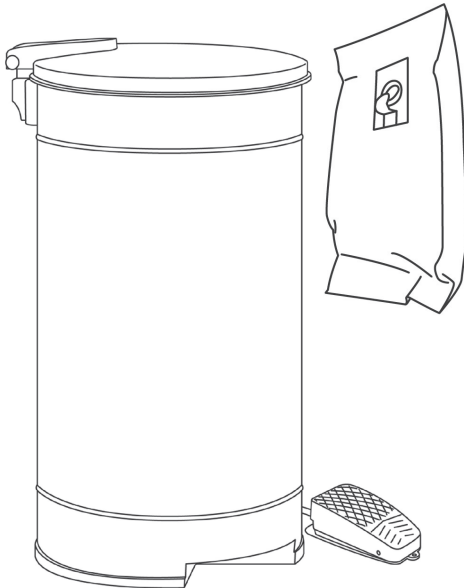

Cleaning hair in the salon has never been easier. Comfortel's SalonVac is an electric vacuum tailored for Hair Salons and cleaning hair. The self-contained vacuum includes technology that incorporates a powerful suction designed to pick up the finest of dust, including hair. Without touching hair, the foot-pedal turns on the power and allows the hair to be sucked directly into the unit.

SPECIFICATIONS

Height 650mm
Diameter 380mm
Wattage 1250W
Power Requirement 240 V 50Hz
Weight 9.5Kg (Not filled)
12 Months Warranty on Parts & Labour

 
Whats in the box:

- 1 x Comfortel's Salon Vac
- 1 x Power Cord
- 1 x Foot Pedal Control
- 5 x Salon Vac Disposable Bags

ASSEMBLY & OPERATION



ASSEMBLY

1. Remove any plastic packaging from the Comfortel Salon Vac.
2. Connect Powercord to foot pedal as shown in Diagram 1.
3. Fit the power connection plug of foot pedal into the socket at the rear of the unit.
4. Plug in the power cord in a standard 240V wall socket.
5. Ensure the green filter is on place inside the bottom of the canister, and a bag is securely fitted.
6. The lid of the unit must be down firmly to ensure the best vacuum suction

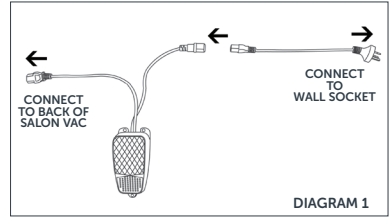

OPERATION

  
1. Ensure the bag and lid are firmly fitted.
2. For main power, press the red 'ON/OFF' switch located at the back of the unit into the ON position to turn on the device as shown in Diagram 2.
3. Sweep hair to the vacuum vent at the front of the unit
4. Press down on the foot pedal to activate the vacuum as shown in Diagram 3.
5. When not in use, turn OFF from the main power switch.

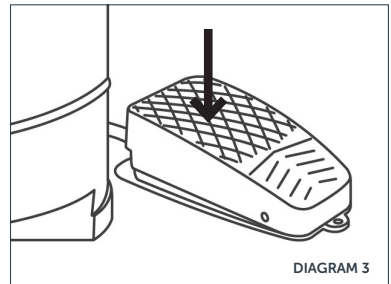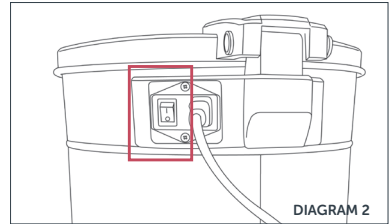

REPLACING THE BAGS (DIAGRAM 4)

If you notice that the bag is getting full, or the vacuum suction of the unit is low, it is time to replace the bag.

 1. Turn off power supply before replacing the bag.
 2. Lift the lid of the unit and slide the cardboard collar of the full bag off the white vacuum tube.
 3. Dispose of the full bag responsibly.
 4. Unfold the new bag and extend it fully. The bag should be opened out completely before fitting into the unit. If this is not done the unit will not operate at its full capacity and the strength of the vacuum suction will be affected.
 5. Place the new bag into the canister and push the cardboard collar of the bag at the top firmly over the white suction tube. Ensure the bag is fitted as far as it will go along the tube, right up to the round ring of the tube.
 6. Put the lid down and make sure its firmly fitted to ensure maximum vacuum suction.
 7. Turn the power on and resume normal use.
- Salon Vac Replacement Bags can be ordered from Comfortel.

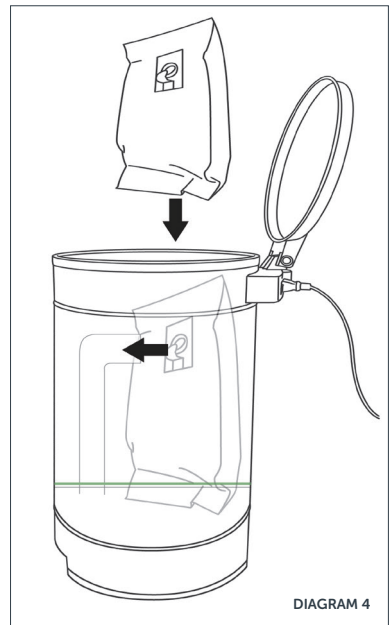

CLEANING

Please make sure the unit is turned off and disconnected from the power supply before cleaning.

Regularly check for hair or dirt build up in the filter, or at the bottom of the unit. Clean and dust and required.

The unit may be wiped over inside and out with a soft cloth and any non-abrasive cleaning agents. Ensure the unit is completely dry before re using.

Do not attempt to open any of the vents or enclosed areas yourself.

The only user-serviceable parts are: Replacing Bags, general cleaning and dusting of the canister, including the filter or replacing the fuse if necessary

MAINTENANCE

A periodic inspection of all components and fasteners should be made to ensure that your product is structurally intact and functioning properly.

Damaged and broken parts should be replaced and loose fasteners tightened.

Should any faults or problems occur, do not attempt to fix them yourself. Repairs should only be made by an approved electrical repairer. For any maintenance issues, contact Comfortel. All maintenance to be carried out by a suitably qualified tradesperson.

comfortel

help.comfortel.com.au

PRODUCT CODE

#9806 SALON VAC II
WITH FOOT CONTROL

VOLTAGE: 240V/50HZ
POWER: 1250W

Revision Date: V2.04.09.2019

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.

For more information about our products and services, contact us at comfortel.com.au

WARRANTY PERIOD

TERMS AND CONDITIONS. For more information about our warranty, please refer to our website.

PURCHASE DATE

INVOICE NUMBER

NOTE YOUR PURCHASE DATE & INVOICE NUMBER FOR FUTURE REFERENCE