
# solana

#6110.01 SOLANA ELECTRIC SPA MASSAGE TABLE - CREAM/NATURAL OAK

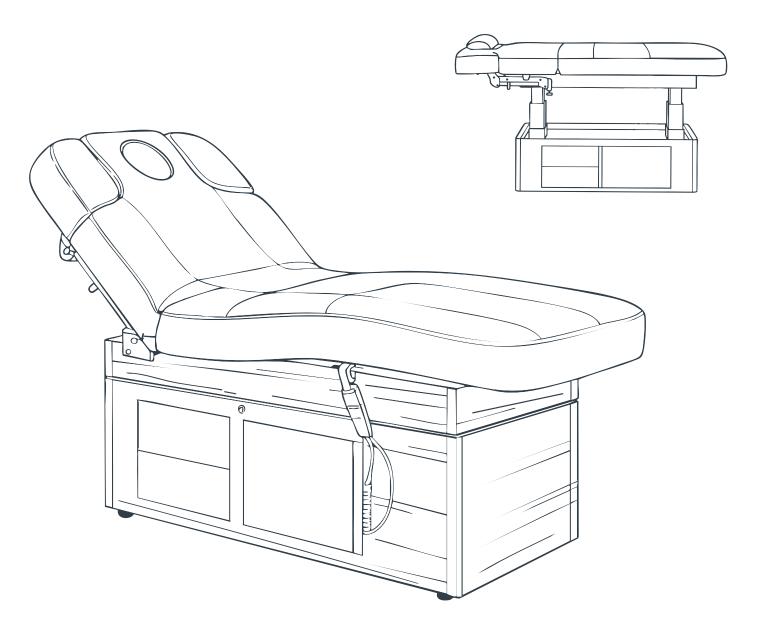

THIS PRODUCT IS INTENDED FOR COMMERCIAL/PROFESSIONAL USE ONLY

#### **LEGAL NOTICE**

The information contained in this document is intended for informational purposes only and is subject to change without any notice. The information provided in this document should not be construed as a commitment by Comfortel.

Comfortel assumes no responsibility for the accuracy of the information contained in this instructional manual. There may be some technical inaccuracies or errors and we make no expressed or implied warranties of any type concerning the information contained in this document, including but not limited to the implied warranties of fitness for purpose. Comfortel shall not be liable for any incidental or consequential damages in connection with or arising out of the product, performance, or use of this document and the information contained in it.

#### **SAFETY SYMBOLS**


Familiarize yourself with the following safety and warning symbols as they are designed to prevent injury or damage to you or the patient. The important safety instructions and warnings in this manual cannot cover all possible aspects hence use common sense and caution while installing, operating or doing maintenance.










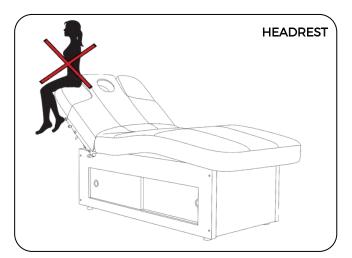


Do not sit or put unnecessary amounts of pressure on the back section of the chair when it is in position of any level. This can damage or destroy the mechanism and cause harm or bodily injury to persons. The mechanism is intended solely to be used when a client is properly seated or laying on the chair top. Damage caused in this manner may void the warranty.

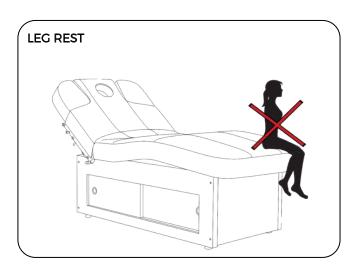

Do not sit or put unnecessary amounts of pressure on the leg section of the chair when it is in position of any level. This can damage or destroy the mechanism and cause harm or bodily injury to persons. The mechanism is intended solely to be used when a client is properly seated or laying on the table top. Damage caused in this manner may void the warranty.

#### INSTRUCTION TO REMOVE MASSAGE TABLE FROM THE BOX

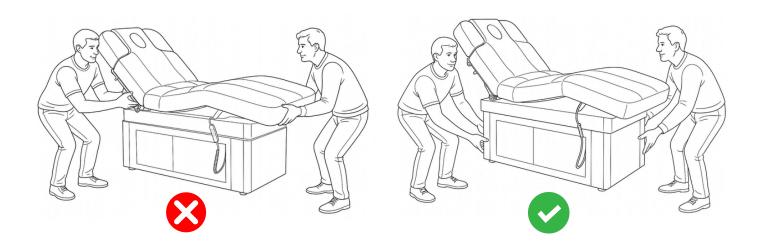

#### **WARNING**

- Power must be cut off when changing electrical components or maintaining and cleaning machines. The plug
  must be plugged into an outlet that is properly installed and grounded, to prevent the risk of fire and electric
  shock.
  - Do not stand on this equipment.
- Do not allow children to play with and place the equipment in a place where children can touch. Please
- adjust the backrest to the highest position when you leave.

  Please do not place the equipment in wet places such as the bathroom to avoid electric shock or other failure.
- Also keep the controllers away from water.
  - Please do not place and operate the equipment in places where is painting/coating or supplying oxygen. Unless being monitored or instructed by personnel who can be responsible for their personal safety, the
- people who have physical obstacles, tactile disorders, mental disorders, lack of experience, common sense or children are not allowed to use the equipment.
- Please contact distributor, service center or related personal with appropriate skill and experience for repairing if the plug is damaged, in case of any danger.
  - Please make sure there is no accessible thing within the stroke during any operation of the products. Operation should be processed by trained professionals.

#### SAFETY INSTRUCTIONS


- Check all connections on a yearly basis
- Do not carry out any unauthorized modification or alteration on the table
- Ensure all wires and cables are neatly arrange to avoid tripping hazards and shock hazard.

#### STRUCTURE OF PRODUCTS

- This product consists of control box, motor, wooden part, hardware, plastic parts and leather. Among them the control box is controlling the operation of the motors and the hand controller.
- This product includes angle adjustment of the backrest, angle adjustment of the seat cushion and lifting adjustment which is an overall and integral structure.

#### **OPERATION INSTRUCTION**

#### SOLANA ELECTRIC SPA TABLE REMOTE

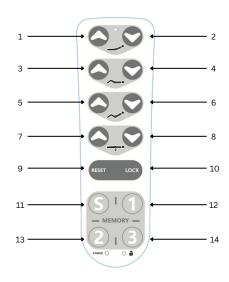

NO.	DESCRIPTION	OPERATION	
1	Backrest moves up	Backrest goes up smoothly by pressing the button.	
2	Backrest moves down	Backrest goes down smoothly by pressing the button.	
3	Leg rest moves up	Leg rest goes up smoothly by pressing the button.	
4	Leg rest moves down	Leg rest goes down smoothly by pressing the button.	
5	Backrest & Leg rest work simultaneously	Press the button to raise the backrest and leg rest simultaneously.	
6	Backrest & Leg rest work simultaneously	Press the button to lower the backrest and leg rest simultaneously.	
7	Height up	Height will raise up smoothly by pressing the button.	
8	Height down	Height will go down smoothly by pressing the button.	
9	One-key reset button	Press the button, the backrest angle will automatically move to the maximum, the seat cushion angle will automatically reduce to the minimum, footrest angle will automatically move to the maximum, the height of the product will automatically reach the lowest position.	
10	Safe-lock button	Keep pressing the "safe-lock button" for about two seconds, lighting up the green light around the button, all the buttons can not be operated except safe-lock button Keep pressing the safe-lock button for about two seconds again, the green button lights go out, all the buttons return to normal operation status.	
10	Safe-lock button light		
11	Store Memory Button	Press and hold for 5 seconds in any position to store it as one of the three memory presets.	
12	Memory Button 1	To save a position: Press Store and Memory 1 together. The blinking light confirms the position is saved.	
13	Memory Button 2	To save a position: Press Store and Memory 2 together. The blinking light confirms the position is saved.	
14	Memory Button 3	To save a position: Press Store and Memory 3 together. The blinking light confirms the position is saved.	


#### **TECHNICAL PARAMETERS**

Rate Voltage	100 - 240 V AC
Rated Frequency	50 - 60 Hz
Rated Current	7 A
Load Capacity	250 Kgs
Package Size	L 214 x W 89 x H 88 cm

#### **MAINTENANCE**

- 1. After every treatment, please only use neutral solution to clear the dust, stains on leather, metal part or other parts. Disinfecting solution like alcohol, acid or alkaline solution are forbidden. This is to prevent the lifetime of the components from being shortened.
- 2. Please lubricate the moving parts regularly (once a year).

#### **CIRCUIT SYSTEM CONNECTION**

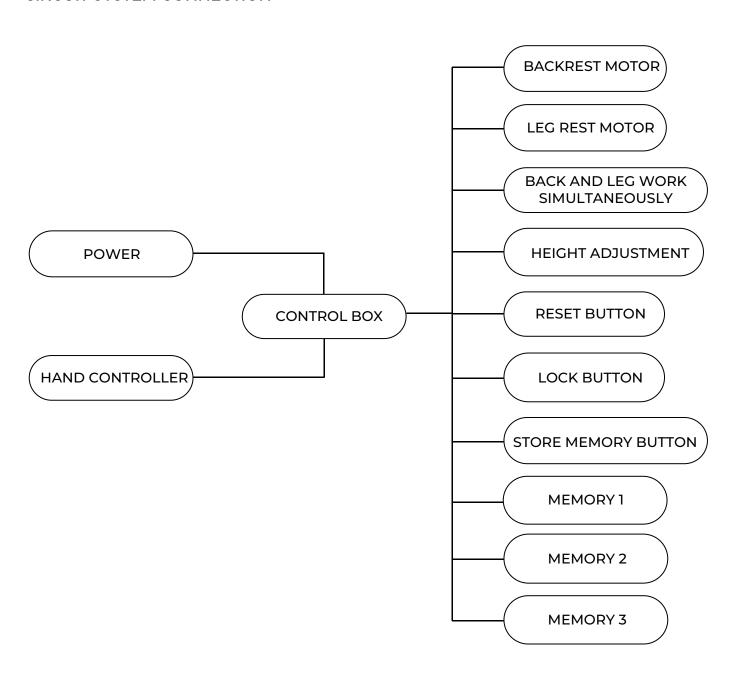

#### **TROUBLESHOOTING**


The Fault Phenomenon	Reason	Solution
	The power cord is unconnected or not plugged well.	1. Connect the power cord or plug it well.
	2. Poor quality of the hand controller.	2. Replace the hand controller.
	3. Poor quality of the control box.	
	4. Rupture of motor tail.	Rease contact maintenance center or supplier for troubleshooting.
Can't move up or down normally	5. Motor was damaged.	
acon nonang	6. Pressing the button, the bed did not move.	1. Confirm that the locking function is off (the locking button indicator is off).     2. If the problem is still not resolved after the above steps, please contact the local dealer or service center.
	1. The rotating parts are short of lubricating oil.	1. Add lubricating oil.
Abnormal Sound	Rotating positions (such as hinge, POM sets) are short of lubricating oil.	2. Add lubricating oil.
	3. Motor quality problems.	3. Replace the motor.

If problem is still not solved after above operations, please contact maintenance center or supplier to solve it.

#### **DIRECTION FOR USE**

### INTEGRATED HEATED TOP (OPTION) USING THE INTEGRATED HEATED TOP:

The table comes with the option for a fully integrated heated top pad. Simply press the heating indicator located on the right side rail of the table to the desired heat level. The heat can reach up to 47°C.

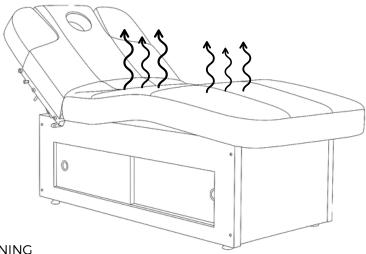

#### 1. HEAT IS NOT FUNCTIONING

#### Possible causes:

- Plug is not properly plugged in
- Wall outlet is not working
- Damaged wires & terminals

#### Solutions:

- Ensure all power cords are properly plugged into a standard 120V or 230V wall outlet
- Ensure heating element connections are properly connected to control box
- Check light indicator on front of the unit to ensure power is supplied. If not illuminated after pressing it once, try plugging the table into another outlet.

#### 13. PROGRAMMABLE TEMPERATURE CONTROLLER



#### During Power On


- 1. Power On/Off: Press (1) to turn the thermostat On/Off
- 2. Setting Temperature: In the mode of programmable, set temperature, and time cannot be adjusted, if the user wants to change, please go to manual mode or programmable mode.
  - Press to set the desired temperature.
- 3. Adjusting & Setting the Clock: Touch the icon  $\stackrel{\triangleright}{\mathbb{D}}$  to set the minute, and hour by using the  $\stackrel{\blacktriangle}{\mathbb{D}}$  arrows. Press the icon  $\stackrel{\triangleright}{\mathbb{D}}$  once more to confirm and exit.
- 4. Locking your Thermostat: Press and hold the  $\triangle$   $\blacktriangledown$  for 5 seconds to lock/unlock your thermostat. In item 2 of high senior options, you can select full lock or half lock


#### LEVELING YOUR TABLE


Leveling or balancing, your table is very important during initial setup and routine maintenance. Your table is equipped with leveling feet that can adjust to uneven floors.

#### TO ADJUST THE LEVELER FEET:

- 1. Place the table in the position you plan to use it.
- 2. To determine which foot needs adjusting, attempt to 'rock' your table. If there is any movement, the leg that is lifting is the one that will need adjusting.
- 3. Raise table height approximately 6 inches.
- 4. Using your hand, or a wrench if necessary, turn the leveling foot in the needed direction. (Counterclockwise will lower the overall height, clockwise will raise the overall height)

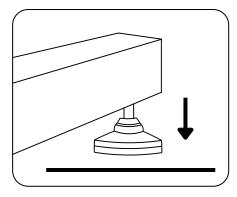

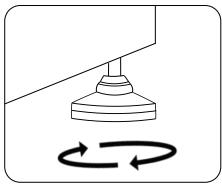

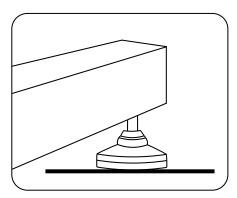

#### HOW TO CARE FOR YOUR UPHOLSTERY

IN AN EFFORT TO ENSURE YOUR PRODUCT QUALITY AND HELP YOU MAINTAIN THE LIFE OF YOUR TABLE, WE HAVE TESTED SEVERAL PREVENTIVE STEPS IN ORDER TO ADVISE YOU REGARDING HOW TO PROTECT THE UPHOLSTERY ON YOUR TABLE AND ACCESSORIES.

- Avoid Storing your table in extreme cold temperatures as excessive coldness will cause cracking. Avoid storing your table in extremely hot temperatures as excessive heat will cause the upholstery to stretch and pucker. Be sure to keep your table away from heaters, electrical appliances, and direct sunlight.
- Clean your upholstery daily.
- We recommend cleaning your upholstery with a mild detergent to protect it against oil stains and dirt, which will cause cracking and permanent stains.
- We recommend a mild mixture of anti-bacterial dish soap with water in a spray bottle. Spray the table with the solution and wipe down the table with a clean damp towel.
- Use both ends of the table. Occasionally, switch the face rest from one end of the table to the other to avoid uneven use.
- Protect your table from general abrasions, cuts, and punctures.



#### CAUTION

- 1. The use of alcohol with dry out the vinyl and cause it to crack.
- 2. Prolonged exposure to extreme temperatures may cause damage to vinyl.



Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.

## comfortel

#### help.comfortel.com.au

#### PRODUCT CODE

#6110.01

SOLANA ELECTRIC SPA MASSAGE TABLE - CREAM/NATURAL OAK

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

#### PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE

#### WARRANTY PERIOD

PURCHASE DATE	INVOICE NUMBER