


# hot towel cabinet

#5355 HOT TOWEL CABINET - WHITE

#5356 HOT TOWEL CABINET - BLACK

---

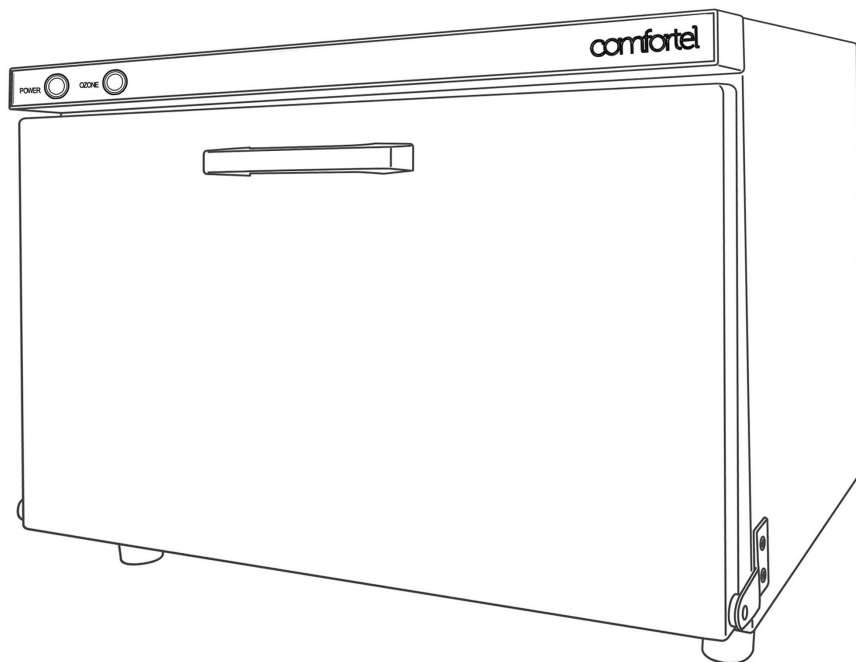

## IMPORTANT PLEASE READ THESE SAFETY INSTRUCTIONS

### GENERAL SAFETY

1. Read carefully and keep these instructions in a safe place.
2. Use this product only for its intended function and do not use attachments not recommended by the manufacturer.
3. Do not use outdoors.

### PRECAUTIONS

1. The inside walls of the cabinet and the metal rack (6) become very hot while the cabinet is in use. Avoid touching these surfaces.
2. Do not operate the cabinet in a wet environment. Room temperature should be between  $<40^{\circ}\text{C}$  ( $104^{\circ}\text{F}$ )
3. The towels can become very hot if they are kept in the cabinet for an extended period of time. Please check the temperature of the towels when taking them out of the cabinet, before using them on the skin.

### ELECTRICAL APPLIANCES

1. DO NOT allow children to have access to or operate this product.
2. Turn the power off and remove the plug when not in use or when cleaning.
3. Keep the power cord away from heat sources.
4. Do not use an extension cord unless the cord complies with local electrical safety standards.
5. Periodically inspect the power cord for signs of damage.
6. Do not let the power cord get damaged in any way. Do not operate any electrical item with a damaged power cord.
7. Do not attempt to move the cabinet while it is in use.




**CARE SHOULD BE TAKEN THAT THE SKIN AND EYES OF THE USER IS NOT EXPOSED TO THE UV LIGHT FOR ANY EXTENDED PERIOD OF TIME. WHEN THE UV FUNCTION IS IN USE, KEEP THE DOOR CLOSED. AVOID LOOKING AT THE LIGHT WHEN OPENING THE CABINET.**

## GET STARTED


The function of the Hot Towel Cabinet is to warm, and then maintain the temperature of moist towels for use in facial and body treatments. The cabinet features an Ultra-Violet light globe (Ozone) on the back wall which can be turned on or off independently of the warming function. The UV light (Ozone) may help prevent the damp towels becoming stale or getting a musty odour while being stored in the cabinet.

**Please note:** The Ozone function is not an appropriate method of sterilizing soiled or used items. The interior of the cabinet will reach around  $80^{\circ}\text{C}$  ( $176^{\circ}\text{F}$ ). It will maintain this temperature while the cabinet is turned on and in use.

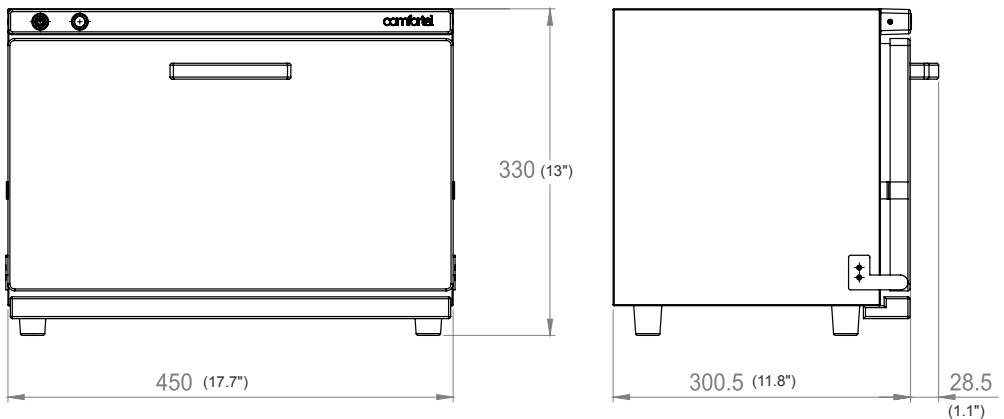

## OPERATION

1. Set up cabinet on a level bench top or trolley. Ensure 5cm (2") clearance on all sides of the cabinet.
2. Remove any plastic or foam packaging from the inside and outside of the cabinet.
3. Plug the power cord in at the wall point and turn on
4. Prepare towels. Dampen towels thoroughly with water then wring out excess water. Fold towels or roll into a cylindrical shape.
5. Place the damp towels into the cabinet, stacking them evenly.
6. Turn the Power (1) to "ON". A blue light will illuminate to show that the warming function is working and the unit is now heating.
7. The towels will be ready to use in approximately 20-30minutes. Ensure they are on the towel racks (4).
8. The Ozone (UV) function may be used by turning the switch (2) to "ON". A blue light will illuminate to show that the UV Light (3) is on.
9. The door should remain closed while the cabinet is in use. Open the door only when adding or removing towels.
10. Ensure that both POWER & OZONE switches are turned "OFF" at the end of the day by pressing the switches so they are not illuminated with blue light.
11. Remove unused towels at the end of the day or when not in use. Start with fresh towels every day.
12. The water drip tray (5) should be detached from the undercarriage of the cabinet and emptied at the end of each day. (It is attached by a metal clip at each front edge of the undercarriage.)
13. Leave the door open at the end of each day, after the unit is turned off.

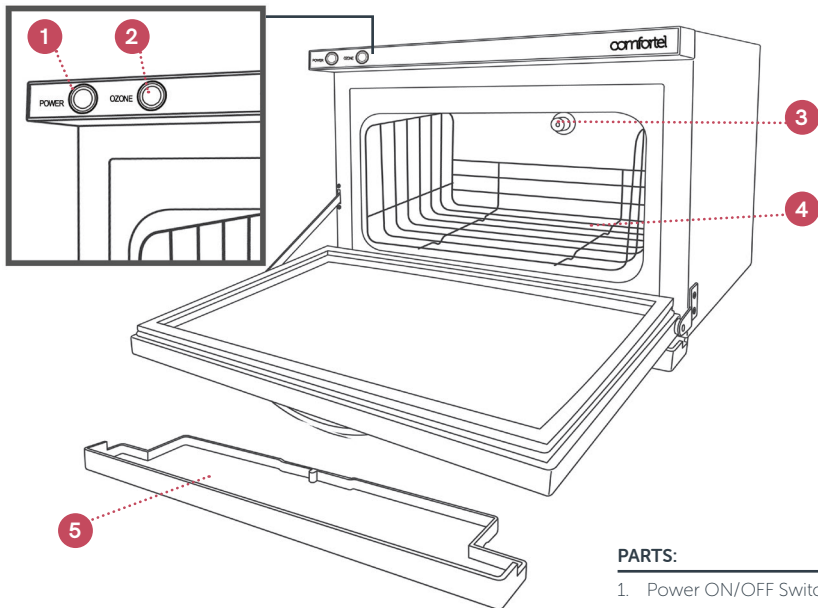

### PARTS:

1. Power ON/OFF Switch
2. Ozone (UV) ON/OFF Switch
3. Ultra-Violet (UV) Light
4. Towel Rack
5. Water Drip Tray

## DAILY CLEANING

### DAILY CLEANING:

Follow these instructions. Always empty the hot towel cabinet and the drip tray at the end of each day.

1. Turn the hot towel cabinet OFF (at both Power and Ozone buttons), and empty all of the unused towels out of it.
2. If any spills (oil, product) have occurred during the day, clean up with mild soap and water on a soft cloth or sponge. Clean the floor, walls and rack to remove all residue.
3. Using a clean towel, wipe down all interior surfaces so the unit is dry. Remove the rack (if present) and thoroughly wipe it dry.
4. Be sure to clean the rubber seal around the opening (on both the cabinet side, and around the door)! Pull it forward and gently clean behind it, as well as in the cracks and crevices. You never know what might be lurking in there!
5. **Pull out the drip tray, empty it and make sure it is completely dry before replacing it.** Some spas and salons like to prop the tray in front of the cabinet as an indicator that the cabinet has been cleaned. This is a great technique to ensure the tray is completely dry before commencing use of the unit again the next day.
6. Wipe down the outside of the cabinet, removing dust, grime and any product residues.
7. **Finally (this is Important): Leave the cabinet door open overnight, to allow the cabinet to air out and completely dry inside.**

**BEFORE CLEANING MAKE SURE THE CABINET IS DISCONNECTED FROM THE ELECTRICAL SUPPLY  
DO NOT USE ALCOHOL, SOLVENTS OR ABRASIVE CLEANERS, AS THEY WILL DAMAGE THE PLASTIC HOUSING.**

## MAINTENANCE

A periodic inspection of all components and fasteners should be made to ensure that your product is structurally intact and functioning properly.

Damaged and broken parts should be replaced and loose fasteners tightened.

Should any faults or problems occur, do not attempt to fix them yourself. Repairs should only be made by an approved electrical repairer. For any maintenance issues, contact Comfortel. All maintenance to be carried out by a suitably qualified tradesperson.

# comfortel

[help.comfortel.com.au](http://help.comfortel.com.au)

### PRODUCT CODE

#5355 HOT TOWEL CABINET II WHITE  
#5356 HOT TOWEL CABINET II BLACK  
#5355-56 VOLTAGE: 240V. 50HZ  
POWER: 195W  
#5355-56-US VOLTAGE: 110V. 50HZ  
POWER: 195W

Revision Date: 27.05.2021

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

### **PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE**

For more information about our products and services, contact us at [comfortel.com.au](http://comfortel.com.au)

### WARRANTY PERIOD

TERMS AND CONDITIONS. For more information about our warranty, please refer to our website.

PURCHASE DATE

INVOICE NUMBER

NOTE YOUR PURCHASE DATE & INVOICE NUMBER FOR FUTURE REFERENCE